

UTILITIES LOCATION DIAGRAM

115-V 20-Amp 60-Hz Self-Timed Unit

WARNING!

This diagram is for reference only! It is not to be used as the sole reference for installation of the SUITMATE® unit.

